


Window Sample

(425) 258-3667

www.Cobra-Construction.com

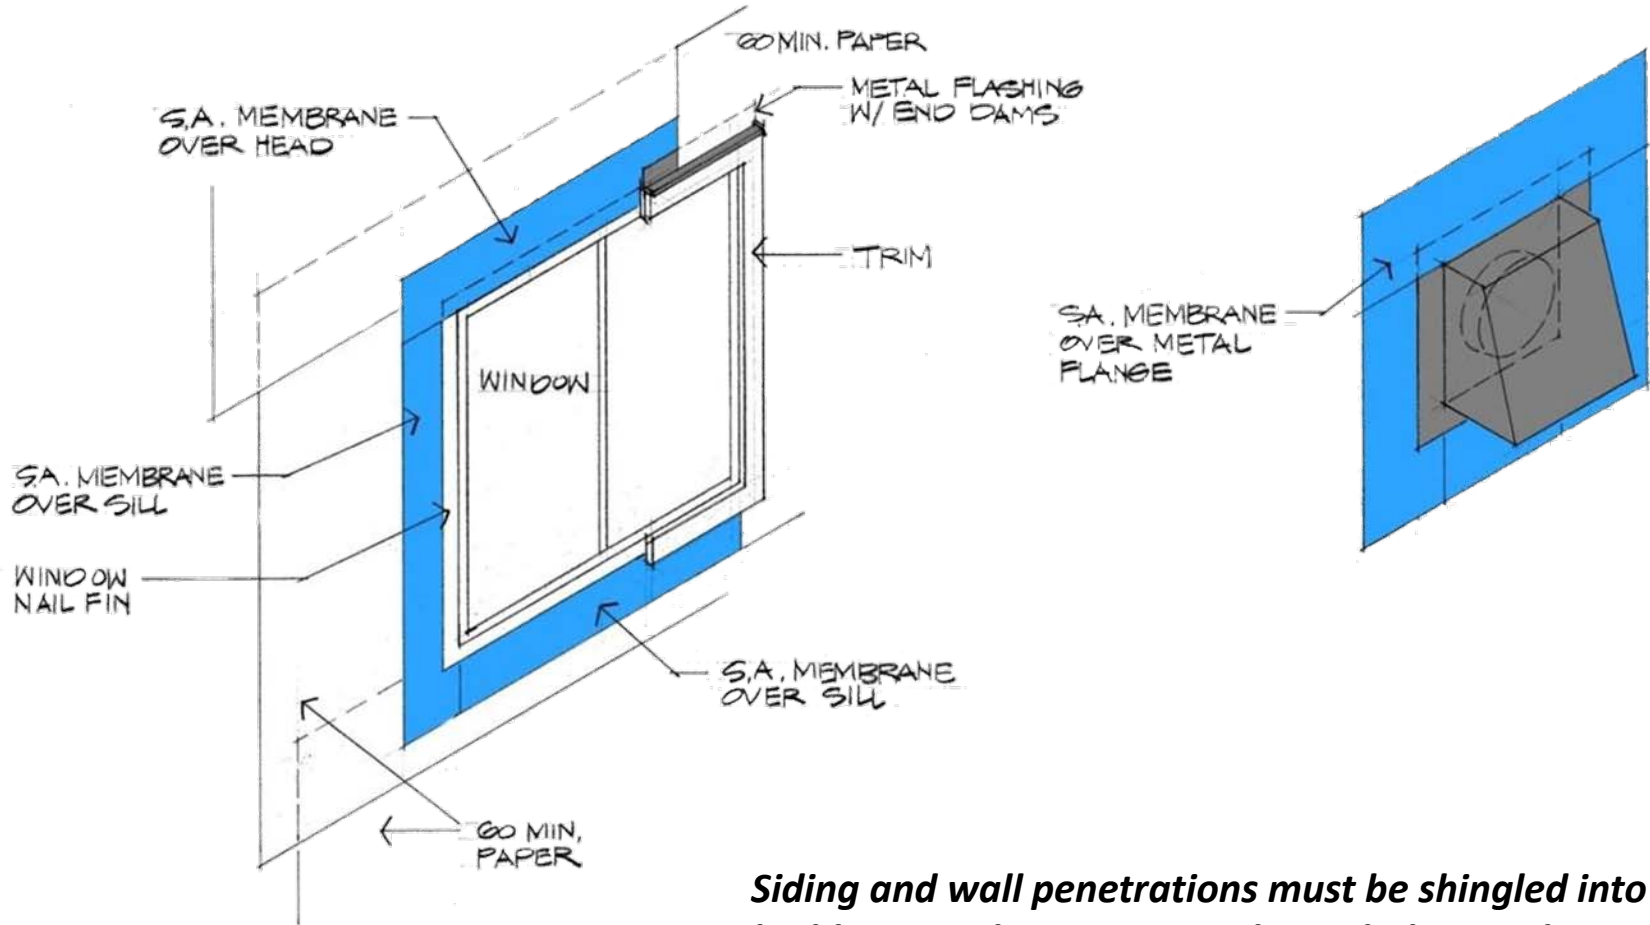

Siding and wall penetrations must be shingled into the building envelope system. This includes windows, dryer vents and all other penetrations. This illustration depicts the concept. Actual conditions may vary.